


Canadian 66ft Bulkhead Flat Car Wagon plat canadien de 66 pieds à cloison

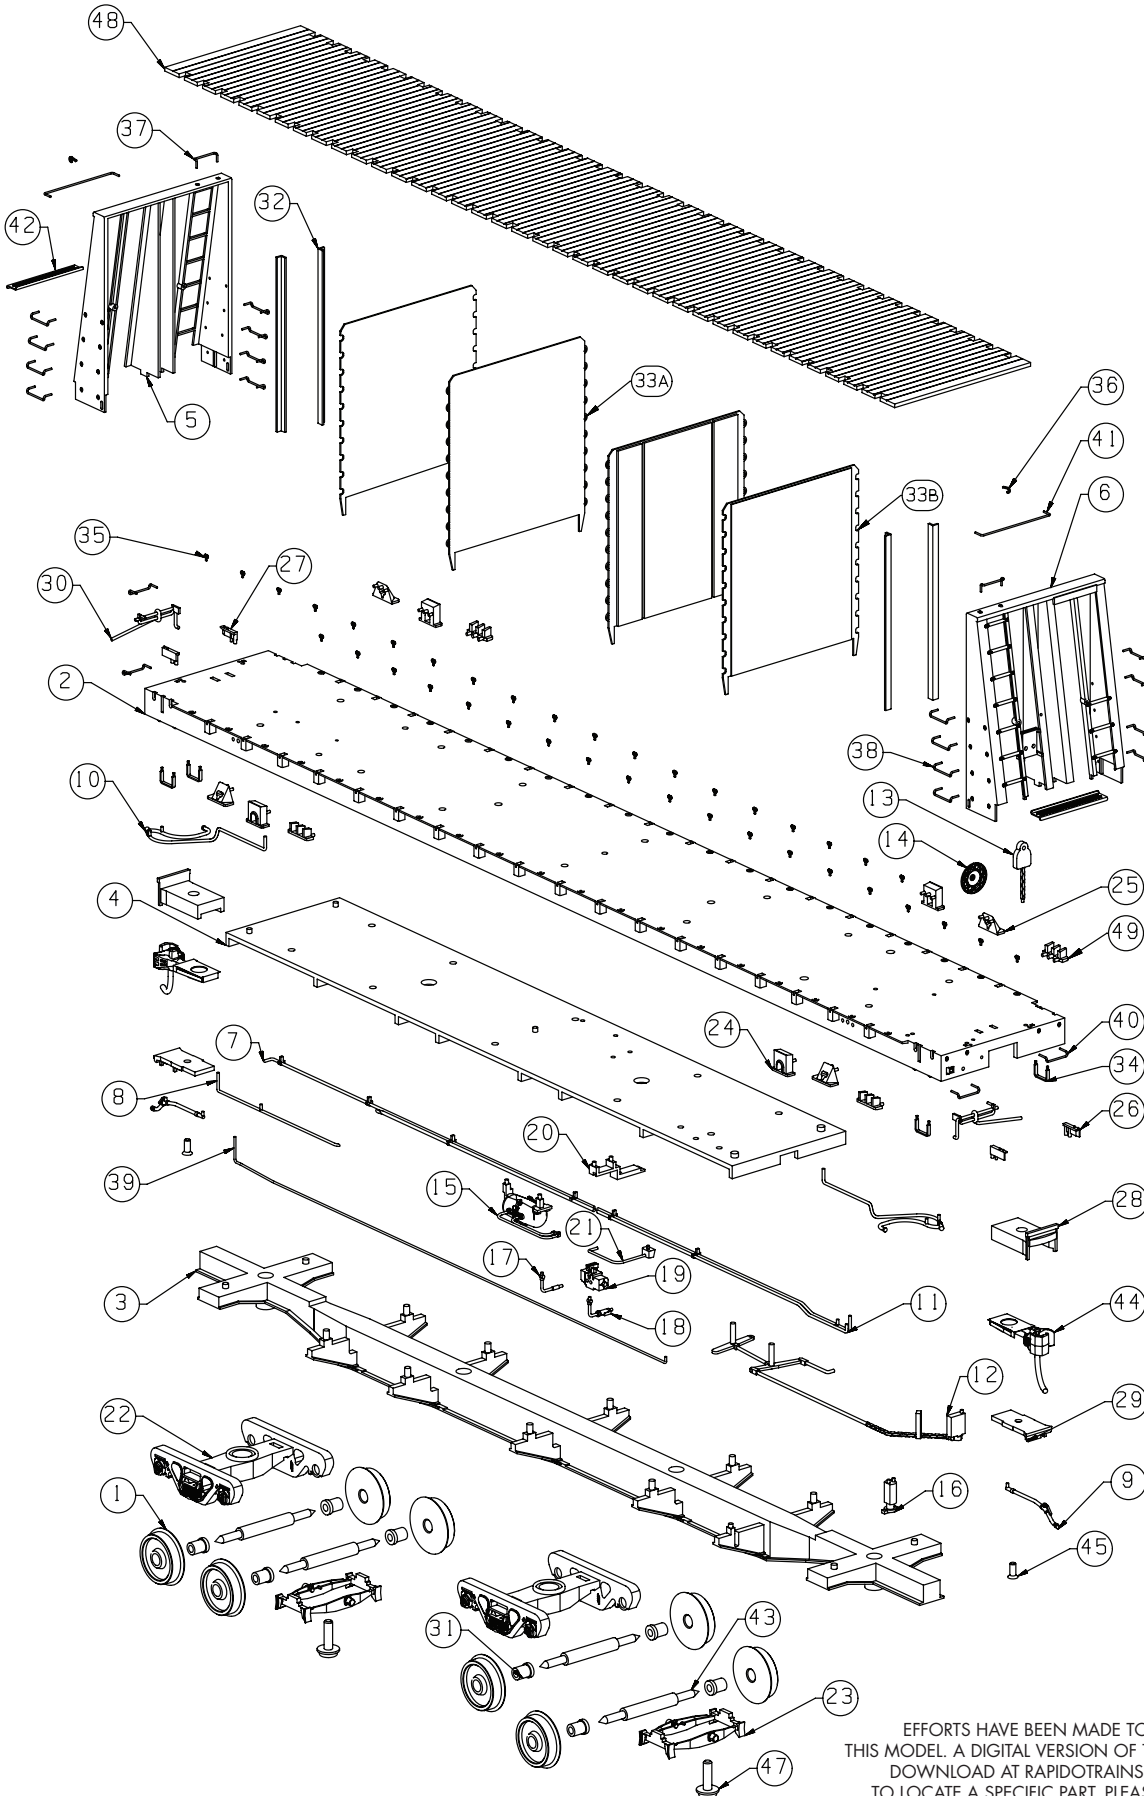

49	147-05-05	4
48	WOOD PLATE A	1
47	SCREW 1.7X6 PWB	2
46	SCREW 1.7X5 KB	2
45	SCREW 1.2X3 KB	2
44	COUPLER	2
43	5A-MT003	4
42	169-MT005	2
41	147-MT012	2
40	147-MT010	4
39	147-MT009	1
38	147-MT008	16
37	147-MT007	2
36	147-MT006	2
35	147-MT005	38
34	147-MT004	4
33B	147-MT003	2
33A	147-MT001	2
32	147-05-14	4
31	147-05-12	8
30	147-05-11	2
29	147-05-10	2
28	147-05-09	2
27	147-05-08	2
26	147-05-07	2
25	147-05-04	4
24	147-05-03	4
23	147-05-02	2
22	147-05-01	2
21	147-04-15	1
20	147-04-14	1
19	147-04-13	1
18	147-04-12	1
17	147-04-11	1
16	147-04-10	1
15	147-04-09	1
14	147-04-08	1
13	147-04-07	1
12	147-04-06	1
11	147-04-05	1
10	147-04-04	2
9	147-04-03	2
8	147-04-02	1
7	147-04-01	1
6	147-03-02	1
5	147-03-01	1
4	147-02-02	1
3	147-02-01	1
2	147-01-01	1
1	133-MT017	8
PC NO	PART NAME	QTY

EFFORTS HAVE BEEN MADE TO ILLUSTRATE ALL PARTS FOUND ON THIS MODEL. A DIGITAL VERSION OF THIS DOCUMENT IS AVAILABLE FOR DOWNLOAD AT RAPIDOTRAINS.COM. SHOULD YOU NOT BE ABLE TO LOCATE A SPECIFIC PART, PLEASE CONTACT US FOR ASSISTANCE.