



HO SCALE


102077 - Budd Steerable Front Axle

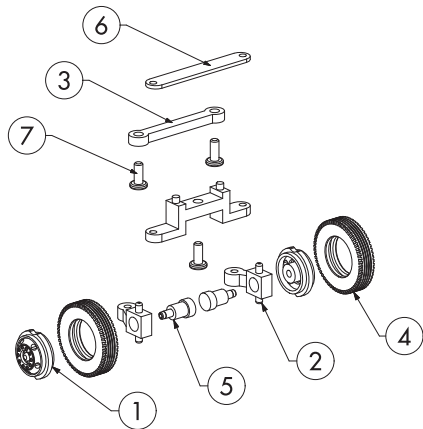


STEP 1: ASSEMBLE TIRES

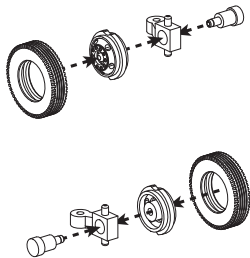

STEP 2: ASSEMBLE AXLES*

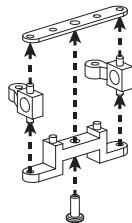

STEP 3: ASSEMBLE LINKAGE*

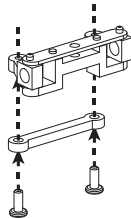

*TIRES AND WHEELS NOT SHOWN IN STEPS 2 AND 3 FOR CLARITY ONLY

| 7 | SCREW 1.4X3.5 CB | 3 |
|-------|------------------|-----|
| 6 | 701-MT020 | 1 |
| 5 | 701-MT009 | 2 |
| 4 | 701-07-01 | 2 |
| 3 | 701-06-03 | 1 |
| 2 | 701-06-01 | 2 |
| 1 | 701-04-03 | 2 |
| PC NO | PART NAME | QTY |

RAPIDO